



Force and Load Charts - AZV Twin Rod


Traverse Load Ø25-100mm

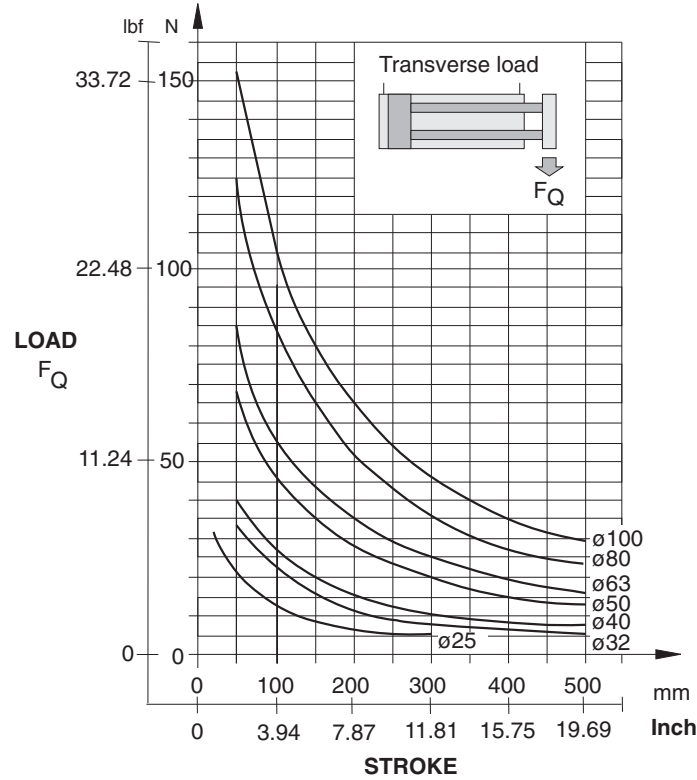


Torque Load Ø25-100mm

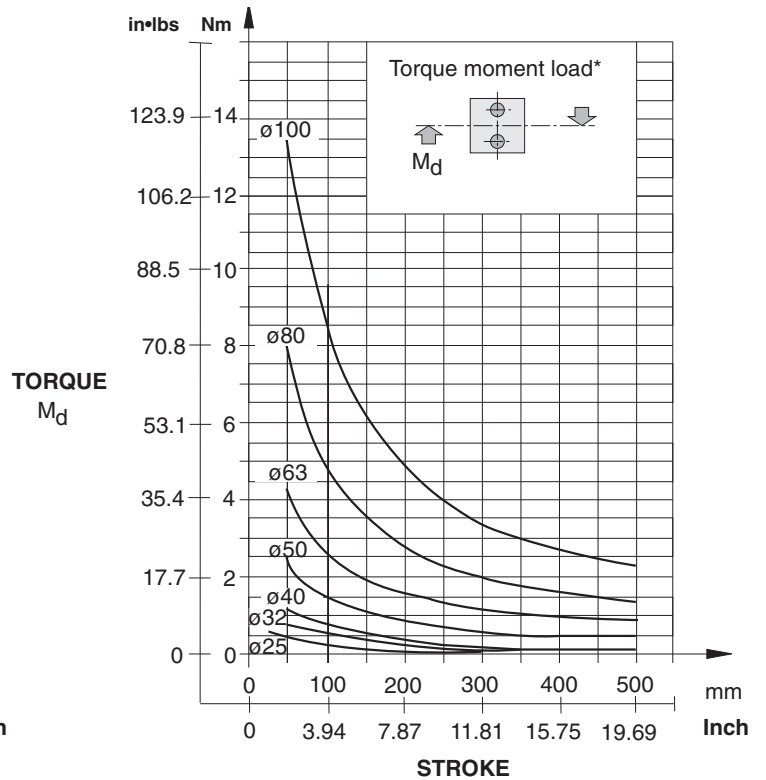

Side Load Ø25mm

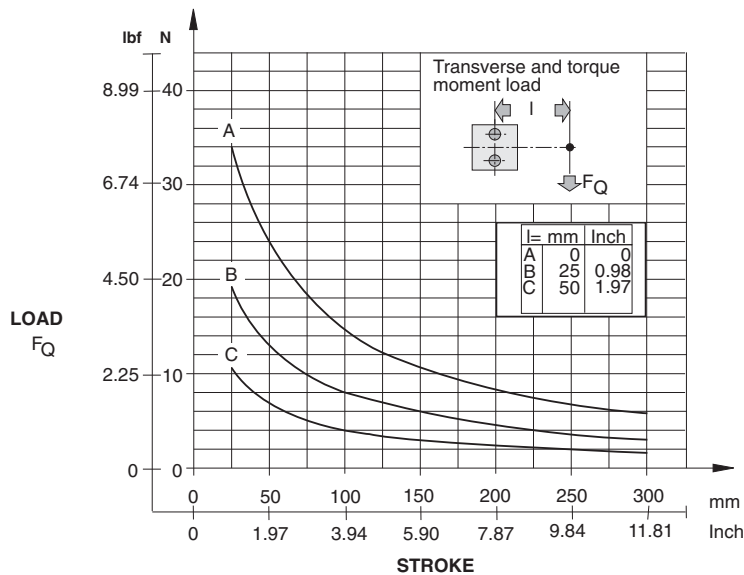


Side Load Ø32mm

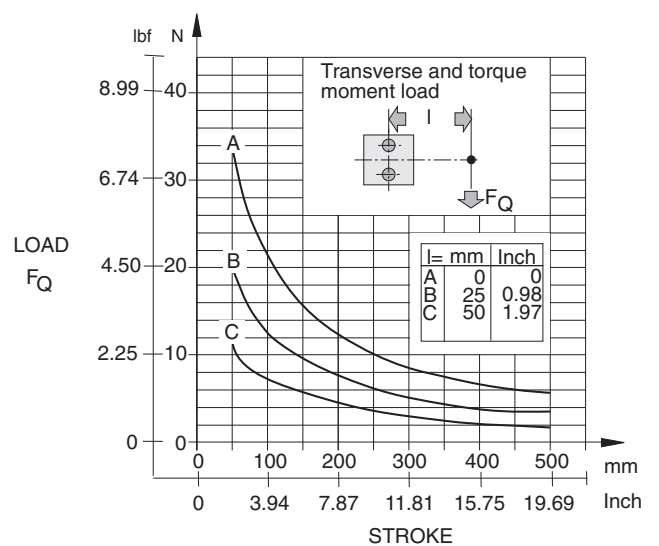


Force and Load Charts - AZV Twin Rod


Side Load Ø40mm

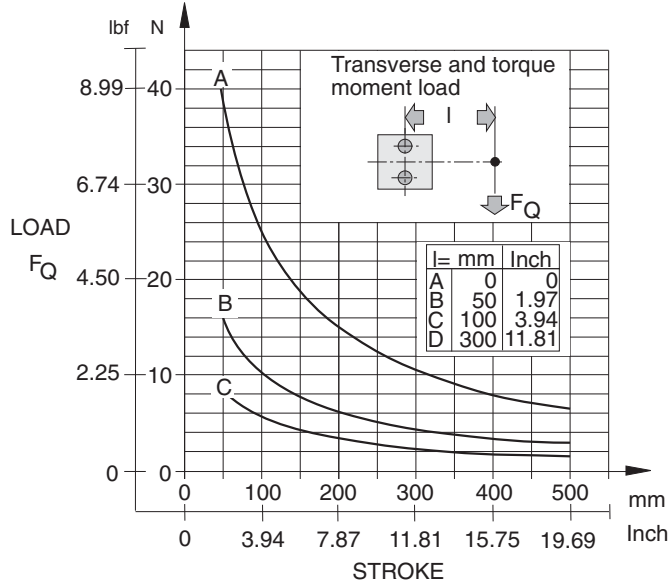


Side Load Ø50mm

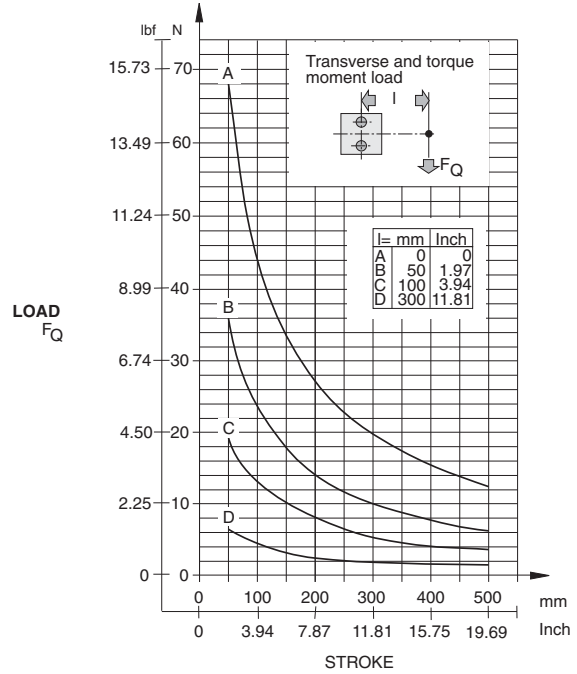

Side Load Ø63mm

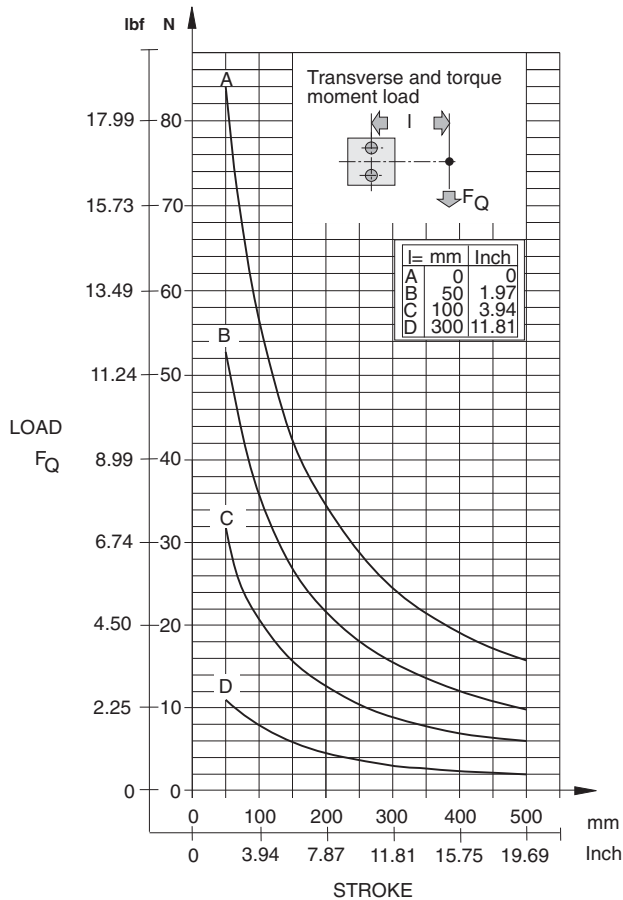


Side Load Ø80mm

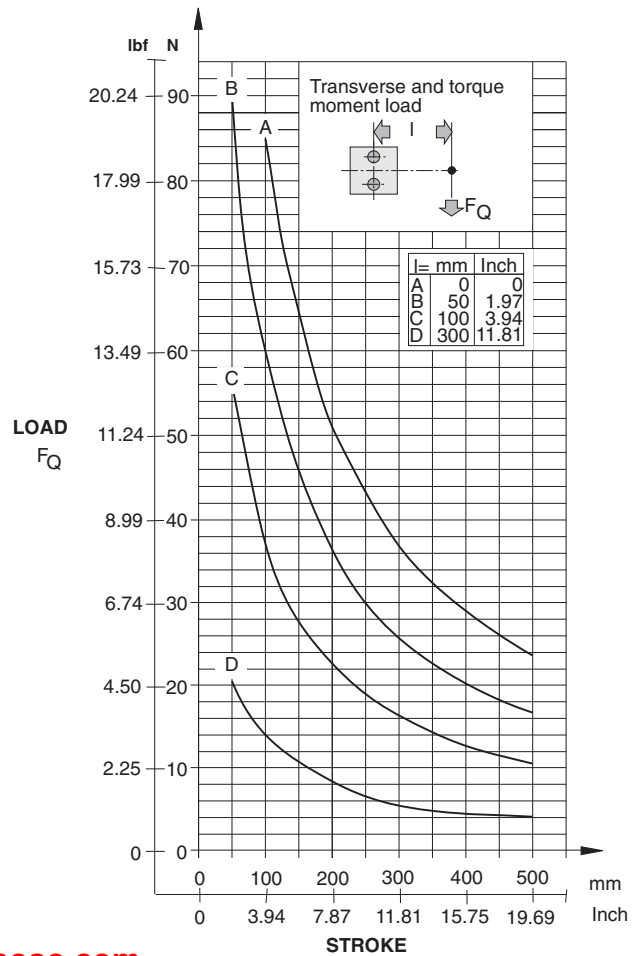


Force and Load Charts - AZV Twin Rod

Side Load Ø100mm

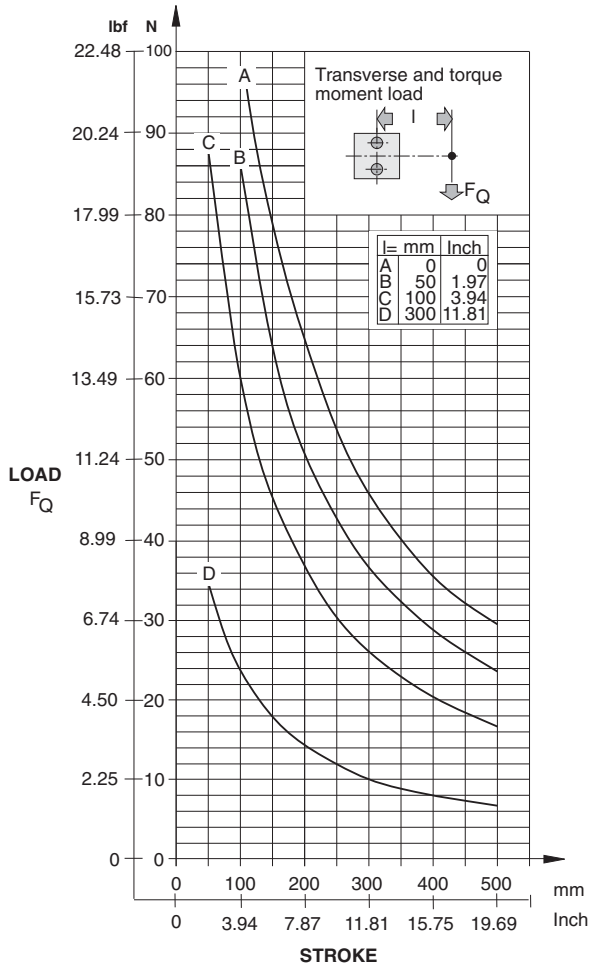

Recommended Installation

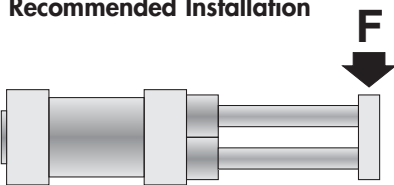

Cylinders should be mounted with the rods in the vertical orientation for optimum performance..