



Product Type: OEMZL6 Step Motor Drive

The above product is in compliance with the requirements of directives

- 72/23/EEC Low Voltage Directive
- 93/68/EEC CE Marking Directive

Additional Information:

For complete user documentation, please refer to the Compumotor web site (www.compumotor.com), where you may download the user guides listed in the table below, or request printed user guides.


For questions, please contact:

Technical Assistance, Applications Engineering Department
 (e-mail tech_help@compumotor.com or call 800-358-9070 North America, 707-584-7558 International).

The following table lists user guides that contain information applicable to the OEMZL6. You may also purchase these user guides as a set; order part number OEMZL6 KIT.

Part Number	Title
88-014027-01	<u>ZETA4 User Guide</u> Note: All information contained within this user guide is applicable with the exception of the Active Damping feature. All references to this feature should be ignored.
88-015920-01	<u>ZETA4 Drive and ZETA6104 Indexer/Drive User Guide Addendum LVD Installation Instructions</u> Note: All information contained within this document is applicable to the OEMZL6104.
88-015436-01	<u>EMC Installation Guide</u> Note: Refer to the Step Motor Drives section of this document for applicable information.

Quick Reference Guide

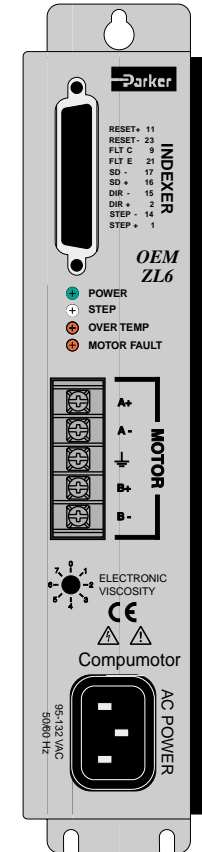

OEMZL6 Stepper Drive

Compumotor Division
 Parker Hannifin Corporation
 p/n 88-018620-01 A
 May 15, 2000



