
Series 3827


Application and Installation Guide



Series 3827 (Body Ported) 1/8" NPT Solenoid Valves

Two-Way, Two-Position, Normally Closed

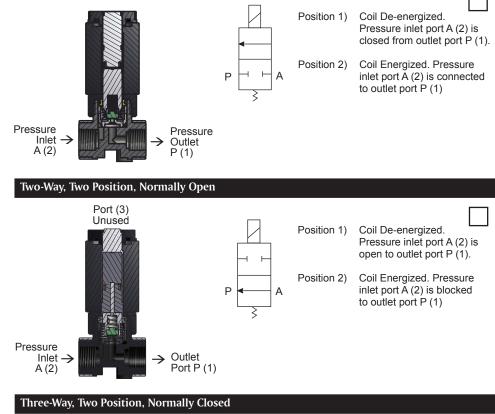

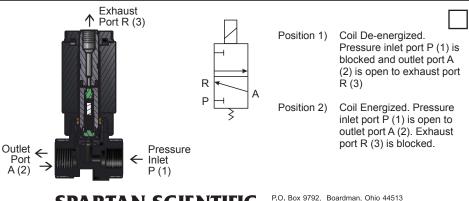

(330) 758-8446 Fax: (330) 758-3314

SPARTAN SCIENTIFIC



Caution

Do not use media, voltage or pressures other than that recommended by Spartan Scientific Inc. as valve malfunction could result. Misuse or misapplication of Spartan solenoid valves could cause serious bodily injury or property damage.

Warranty Information

Solenoid valves and all other products manufactured by Spartan are warranted by Spartan to be free from defects in material and workmanship for a period of 1 year from the date of purchase. Spartan's obligation under this warranty is limited to repair or replacement of the defective product or refund of the purchase price paid solely at the discretion of Spartan and provided such defective product is returned to Spartan freight prepaid and upon examination by Spartan such product is found defective. This warranty shall be void in the event that the product has been subject to misuse, misapplication, improper maintenance, modification or tampering. This warranty is expressed in lieu of all other warranties, expressed or implied from Spartan Scientific, Inc., representatives or employees.

SPARTAN SCIENTIFIC


(330) 758-8446 Fax: (330) 758-3314

P.O. Box 9792, Boardman, Ohio 44513

www.comoso.com

Series 3827


Application and **Installation Guide**

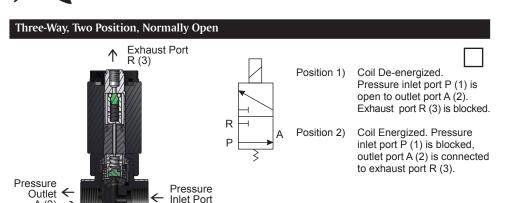


Three-Way, Two Position, Mixing Function

P(1)

A(2) \rightarrow

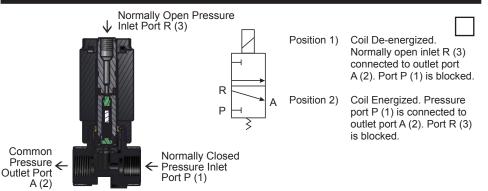

Three-Way, Two Position, Diverter Function

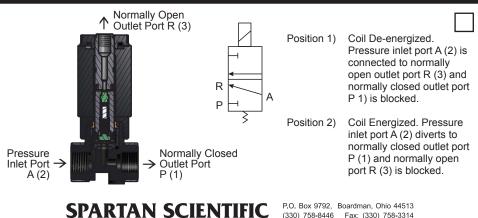

(330) 758-8446 Fax: (330) 758-3314

Series 3827

Application and Installation Guide



Electrical Hook-Up





Power leads connected to vertical pins on all versions. Horizontal pin is earth ground on all

Flying Lead Style Coil




Power leads connected to coil flying leads. No earth ground present.

Warning! Plastic pipe threads.

Overtightening of fittings may result in premature part failure.

Spartan Scientific requests the use of plastic molded pipe fittings whenever possible. If metal fittings are used do not exceed a maximum of 70 in. Ibs. of applied torgue or finger tighten and 2 1/2 turns with a conventional box end wrench.

Mounting Hole / Passage Pattern

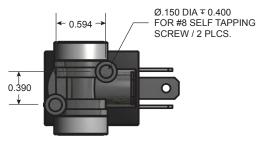

SPARTAN SCIENTIFIC

P.O. Box 9792, Boardman, Ohio 44513 (330) 758-8446 Fax: (330) 758-3314

www.comoso.com