


Technical Data Sheet

1-Ear Clamp with mechanical interlock

Product Group 105 & 155



Connecting Technology

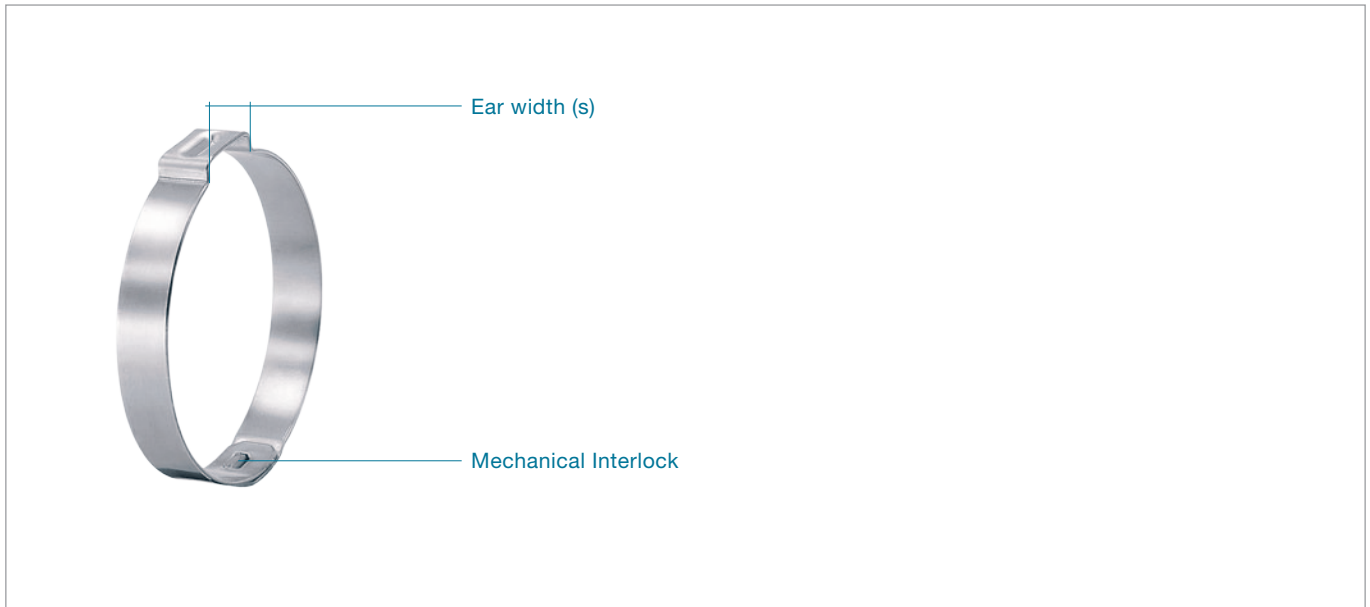

Clamp ear: fast and simple installation, visible deformation provides evidence of proper closure

Dimple: increases clamping force

Burr-free strip edges: reduced risk of damage to parts being clamped

1-Ear Clamp with mechanical interlock Product Group 105 & 155

Material

PG 105 Galvanized or zinc-plated steel band

PG 155 Stainless Steel, Material no. 1.4301/UNS S30400

Corrosion resistance according to DIN EN ISO 9227

PG 105 ≥ 144 h

PG 155 ≥ 1000 h

Series

Size range	width x thickness
10.5 – 116.0 mm	7.0 x 0.6/0.8 mm

Some sizes are only available if an appropriate minimum quantity is ordered.

PG 105 only available on request.

Using tools designed or endorsed by Oetiker, the clamp is closed by drawing together the lower radii of the “ear”. The maximum diameter reduction is proportional to the open “ear” width. The theoretical maximum reduction in diameter is given by the formula:

$$\text{Max. diameter reduction} = \frac{\text{Ear width (s)}}{\pi}$$

To ensure perfect sealing, clamp ears must be correctly closed during installation.

Clamp diameter

The following applies as a guideline: To determine the correct clamp diameter, push the hose onto the attaching material, (e.g. the nipple), and then measure the outer diameter of the hose. The value of the outer diameter must be slightly above the average value of the diameter range of the clamp to be selected.

Mechanical interlock

The mechanical interlock is a mechanical connection which keeps the clamp securely closed. By using a mechanical interlock instead of spot-welding, corrosion around the closure elements is reduced.

The data in this catalog are based on many years experience. They are intended for reference, not as design specifications.

Assembly recommendations

The clamp ear should be closed with a constant tool jaw force, this practice is referred to as “force priority closure”. This assembly method ensures that a uniform and repeatable stress is applied to the application with a constant tensile force on the mechanical interlock.

Employing this methodology when closing 105 & 155 series clamps will compensate for any component tolerance variations, and ensure that the clamp applies a constant radial force to the application. Fluctuations in component tolerances are absorbed by variations in the “ear” gap (the space between the lower radii after installation).

Closing force

It is important to realize that there is a very close relationship between the desired compression of the material being clamped and the closing force selected. The table below gives maximum closing forces in relation to the size of the part being clamped.

Important

Single tool stroke closure only, do not apply secondary crimping force.

Installation data

Size (mm)	Closing force max. (N)	Installation tools force-monitored ¹ :		
		Manual	Pneumatic	Cordless
10.5 – 17.0	1200	HMK 01/S01	HO ME 2000	CP 01
18.5 – 116.0	2000	HMK 01/S01	HO ME 2000	CP 01

For an alternative option, see our manual pincers on page 104

¹ Further information on page 84

Important note

These figures are intended as a guide, they may vary depending on the type and tolerances of parts being clamped. To ensure optimum clamp selection, we recommend making functional tests with several assemblies.

Order information

Item No.	Ref. No.	Ear width inside (mm)	Size range (mm)	Item No.	Ref. No.	Ear width inside (mm)	Size range (mm)
1-Ear Clamp with mechanical Interlock, stainless Band width 7.0 mm, thickness 0.6 mm				1-Ear Clamp with mechanical Interlock, stainless Band width 7.0 mm, thickness 0.6 mm			
15500000	0105.0R	5	8.9 – 10.5	15500026	0410.0R	10	37.9 – 41
15500001	0113.0R	5	9.7 – 11.3	15500027	0425.0R	10	39.4 – 42.5
15500002	0123.0R	6	10.4 – 12.3	15500028	0440.0R	10	40.9 – 44
15500003	0133.0R	6	11.4 – 13.3	15500029	0455.0R	10	42.4 – 45.5
15500004	0135.0R	6.5	11.5 – 13.5	15500030	0470.0R	10	43.9 – 47
15500005	0138.0R	6	11.9 – 13.8	15500031	0485.0R	10	45.4 – 48.5
15500006	0140.0R	6.5	11.9 – 14	15500032	0500.0R	10	46.9 – 50
15500007	0145.0R	6	12.6 – 14.5	15500033	0515.0R	10	48.4 – 51.5
15500008	0157.0R	7	13.5 – 15.7	15500034	0530.0R	10	49.9 – 53
15500009	0170.0R	6	15.1 – 17	15500035	0545.0R	10	51.4 – 54.5
15500010	0185.0R	9	15.7 – 18.5	15500036	0560.0R	10	52.9 – 56
15500011	0198.0R	9	17 – 19.8	15500037	0575.0R	10	54.4 – 57.5
15500012	0210.0R	9	18.2 – 21	15500038	0590.0R	10	55.9 – 59
15500013	0226.0R	9	19.8 – 22.6	15500039	0605.0R	10	57.4 – 60.5
15500014	0241.0R	9	21.3 – 24.1	15500040	0620.0R	10	58.9 – 62
15500015	0256.0R	9	22.8 – 25.6	15500041	0635.0R	10	60.4 – 63.5
15500016	0271.0R	10	24 – 27.1	15500042	0650.0R	10	61.9 – 65
15500017	0286.0R	10	25.5 – 28.6	15500043	0665.0R	10	63.4 – 66.5
15500018	0301.0R	10	27 – 30.1	15500044	0680.0R	10	64.9 – 68
15500019	0316.0R	10	28.5 – 31.6	15500045	0695.0R	10	66.4 – 69.5
15500020	0331.0R	10	30 – 33.1	15500046	0710.0R	10	67.9 – 71
15500021	0346.0R	10	31.5 – 34.6	15500047	0725.0R	10	69.4 – 72.5
15500022	0361.0R	10	33 – 36.1	15500048	0740.0R	10	70.9 – 74
15500023	0376.0R	10	34.5 – 37.6	15500049	0755.0R	10	72.4 – 75.5
15500024	0381.0R	10	35 – 38.1	15500050	0770.0R	10	73.9 – 77
15500025	0396.0R	10	36.5 – 39.6	15500051	0785.0R	10	75.4 – 78.5

The data in this catalog are based on many years experience. They are intended for reference, not as design specifications.

Order information

Item No.	Ref. No.	Ear width inside (mm)	Size range (mm)
----------	----------	--------------------------	-----------------

1-Ear Clamp with mechanical Interlock, stainless
Band width 7.0 mm, thickness 0.6 mm

15500052	0800.0R	10	76.9 – 80
15500053	0815.0R	10	78.4 – 81.5
15500054	0830.0R	10	79.9 – 83
15500055	0845.0R	10	81.4 – 84.5
15500056	0860.0R	10	82.9 – 86
15500057	0875.0R	10	84.4 – 87.5
15500058	0890.0R	10	85.9 – 89
15500059	0905.0R	10	87.4 – 90.5
15500060	0920.0R	10	88.9 – 92
15500061	0935.0R	10	90.4 – 93.5
15500062	0950.0R	10	91.9 – 95
15500063	0965.0R	10	93.4 – 96.5
15500064	0980.0R	10	94.9 – 98
15500065	0995.0R	10	96.4 – 99.5
15500066	1010.0R	10	97.9 – 101
15500067	1025.0R	10	99.4 – 102.5
15500101	1040.0R	10	100.9 – 104
15500068	1055.0R	10	102.4 – 105.5
15500102	1070.0R	10	103.9 – 107
15500103	1085.0R	10	105.4 – 108.5
15500104	1100.0R	10	106.9 – 110
15500105	1115.0R	10	108.4 – 111.5
15500106	1130.0R	10	109.9 – 113
15500107	1145.0R	10	111.4 – 114.5
15500069	1160.0R	10	112.9 – 116

The Oetiker Group: www.oetiker.com

Headquarters Switzerland

Hans Oetiker AG
Maschinen- und Apparatefabrik
Oberdorfstrasse 21
CH-8810 Horgen (Zürich)
T +41 44 728 55 55
F +41 44 728 55 15
info@ch.oetiker.com

Austria

Hans Oetiker
Maschinen- und Apparatebau
Ges.m.b.H.
Eduard-Klinger-Strasse 19
A-3423 St. Andrä-Wördern
T +43 2242 33 994-0
F +43 2242 33 997
info@at.oetiker.com

Canada

Oetiker Limited
203 Dufferin Street South
P. O. Box 5500
Alliston, Ontario L9R 1W7
T +1 705 435 4394
info@ca.oetiker.com

P. R. China

Oetiker Industries (Tianjin) Ltd.
10 Shuangchenzhong Road
Beichen High Tech Industrial Park
Tianjin 300400
T +86 22 2697 1183
F +86 22 2697 1380
info@cn.oetiker.com

Czech Republic

Hans Oetiker spol. s r. o.
Václavská 116
CZ-37833 Nová Bystřice
T +420 384 386513
F +420 384 386386
info@cz.oetiker.com

France

Oetiker Sarl
Parc d'activités du Bel Air
1, rue Charles Cordier
77164 Ferrières-en-Brie
T +33 1 79 74 10 90
F +33 1 79 74 10 91
info@fr.oetiker.com

Germany

Hans Oetiker
Metallwaren- & Apparatefabrik GmbH
Üsenbergerstrasse 13
D-79346 Edingen a. K.
T +49 76 42 6 84-0
F +49 76 42 6 84-125
info@de.oetiker.com

Kurt Allert GmbH & Co. KG

Postfach 1160
Austrasse 36
D-78727 Oberndorf a. N.
T +49 74 23 87 70-0
F +49 7 4 23 87 70-87
info@allert.oetiker.com

Hong Kong

Oetiker Far East Limited
2210 Tuen Mun Central Square
22 Hoi Wing Road
Tuen Mun NT
T +852 2459 8211
F +852 2459 8322
info@hk.oetiker.com

Hungary

Oetiker Hungaria KFT
Vasvári P. U. 11
H-9800 Vasvár
T +36 94 370 630
F +36 94 370 533
info@hu.oetiker.com

India

Oetiker India Private Ltd.
N-14, Additional Patalganga
Industrial Area
Village Chavane, Khalapur
Rasayani 410 220
Dist. Raigad, Maharashtra
T +91 2192 250107-12
F +91 2192 250105
info@in.oetiker.com

Japan

Oetiker Japan Co. Ltd.
Kaneko Bldg. A
5-3-5 Nakamachi-dai, Tsuzuki-ku
Yokohama 224-0041
T +81 45 949 3151
F +81 45 949 3152
info@jp.oetiker.com

Netherlands

Oetiker Benelux B. V.
Hertzstraat 38
NL-6716 BT Ede
T +31 318 63 71 71
F +31 318 63 34 89
info@nl.oetiker.com

Spain

Oetiker España, S. A.
Pol. Ind. Las Salinas
C/Puente, 18
E-11500 El Puerto
de Santa María (Cádiz)
T +34 956 86 04 40
F +34 956 87 17 07
info@es.oetiker.com

South Korea

Oetiker Far East Limited
Korea Liaison Office
Postal Zip Code 135-880
1401 LG Twintel 1-Cha 157-8
Samseong 1-dong
Gangnam-gu, Seoul
T +82 2 2191 6100
F +82 2 2191 6109
info@kr.oetiker.com

United Kingdom

Oetiker UK Limited
Foundry Close
GB-Horsham, Sussex RH13 5TX
T +44 1403 26 04 78
F +44 1403 24 06 90
info@uk.oetiker.com

USA

Oetiker, Inc.
6317 Euclid Street
Marlette, Michigan 48453-0217
T +1 989 635 3621
800 959 0398 (toll-free)
F +1 989 635 2157
info@us.oetiker.com