



Quick Reference Guide

Product Type: OEMZL4 Step Motor Drive

The above product is in compliance with the requirements of directives

- 72/23/EEC Low Voltage Directive
- 93/68/EEC CE Marking Directive

Additional Information:


For complete user documentation, please refer to the Compumotor web site (www.compumotor.com) where User Guides can be found on-line or hard copies requested.

For questions, please contact:

Technical Assistance, Applications Engineering Department
(e-mail tech_help@compumotor.com or call 800-358-9070 North America, 707-584-7558 International).

The following table describes which User Guides are applicable to the OEMZL4:

Part Number	Title
88-014027-01	<u>ZETA4 User Guide</u> Note: All information contained within this user guide is applicable with the exception of the Active Damping feature. All references to this feature should be ignored.
88-015920-01	<u>ZETA4 Drive and ZETA6104 Indexer/Driver User Guide Addendum LVD Installation Instructions</u> Note: All information contained within this document is applicable to the OEMZL6104.
88-015436-01	<u>EMC Installation Guide</u> Note: Refer to the Step Motor Drives section of this document for applicable information

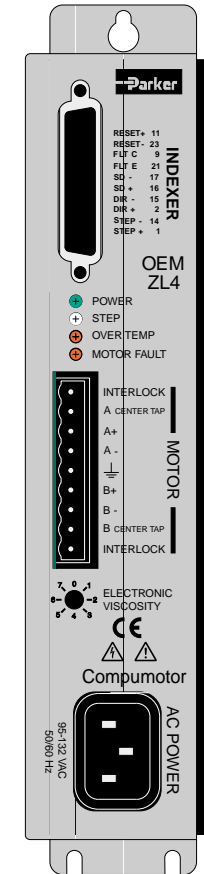



OEMZL4 Stepper Drive

Compumotor Division
Parker Hannifin Corporation
p/n 88-018139-01 B
September 1, 1999



DIP SWITCH SETTINGS

Access through the top of the chassis (loosen screws, move cover plate)

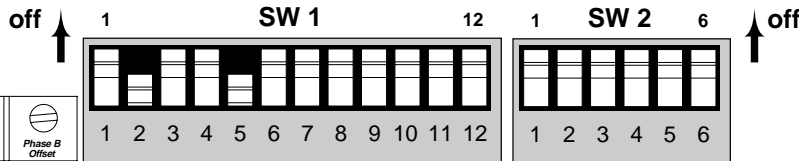

Motor matching

CURRENT

(amps)	1	2	3	4	5
0.14	off	off	off	off	off
0.26	off	off	off	off	on
0.39	off	off	off	on	on
0.51	off	off	off	on	on
0.64	off	off	on	off	off
0.76	off	off	on	off	on
0.89	off	off	on	on	off
1.01	off	off	on	on	on
1.14	off	on	off	off	off
ES21BS 1.26	off	on	off	off	on
1.38	off	on	off	on	off
ES22BS 1.51	off	on	off	on	on
1.63	off	on	on	off	off
ES23BS 1.76	off	on	on	off	on
1.88	off	on	on	on	off
2.01	off	on	on	on	on
2.14	on	off	off	off	off
ES31BS 2.26	on	off	off	off	on
ES21BP 2.38	on	off	off	on	off
2.51	on	off	off	on	on
2.63	on	off	on	off	off
2.76	on	off	on	off	on
ES32BS 2.88	on	off	on	on	on
3.01	on	off	on	on	on
ES22BP 3.13	on	on	off	off	off
3.26	on	on	off	off	on
3.38	on	on	off	on	off
ES33BS 3.50	on	on	off	on	on
3.63	on	on	on	off	off
3.75	on	on	on	off	on
3.88	on	on	on	on	off
ES31BP, ES32BP, ES33BP 4.00	on	on	on	on	on

RESOLUTION²

(steps per revolution)	6	7	8	9
50,800 steps	off	off	off	on
50,000 steps	off	off	on	off
36,000 steps	off	off	on	on
25,600 steps	off	on	off	off
25,400 steps	off	on	off	on
Default Setting 25,000 steps	off	off	off	off
21,600 steps	off	on	on	off
20,000 steps	off	on	on	on
18,000 steps	on	off	off	off
12,800 steps	on	off	off	on
10,000 steps	on	off	on	off
5,000 steps	on	off	on	on
2,000 steps	on	on	off	off
1,000 steps	on	on	off	on
400 steps	on	on	on	off
200 steps	on	on	on	on

WAVEFORM²

Default Setting	-4% 3rd harmonic	-10% 3rd harmonic	-6% 3rd harmonic	Pure sine
	off	off	on	on
	off	on	off	on
	on	off	on	on


AUTOMATIC TEST²

	6	7	8	9	10	11
	on	on	on	on	on	on

S&D/CW&CCW²


Step & Direction Indexer	12
	off
Clockwise & Counterclockwise Indexer	on

2. The drive reads these switches only upon power up. It reads all other switches continuously.

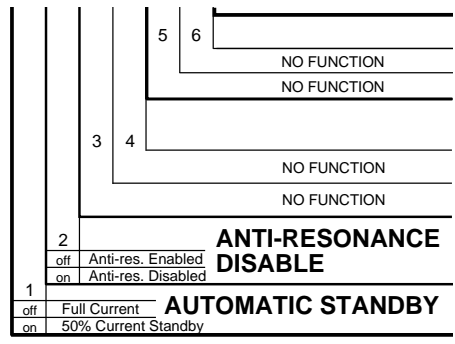

INPUTS & OUTPUTS

AC Input 95-132VAC, 50/60Hz, single phase

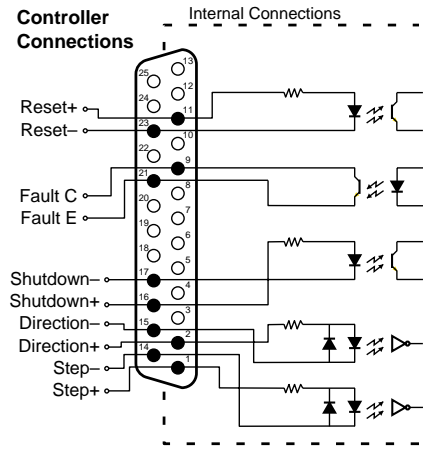


STATUS LEDS

- POWER** Green when power is on
- STEP** Green when drive receives step
Flashes Red/Green in auto test
- OVER TEMP** Red indicates over temp fault
- MOTOR FAULT** Red when drive detects short circuit in motor or motor cable;
Red if interlock is open


MOTOR CONNECTIONS

ES AND OS MOTORS

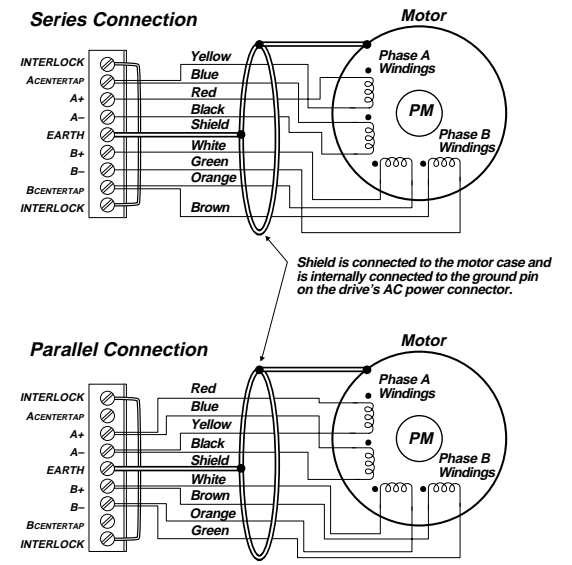

DO NOT LENGTHEN OR REMOVE INTERLOCK JUMPER

RS AND TS MOTORS

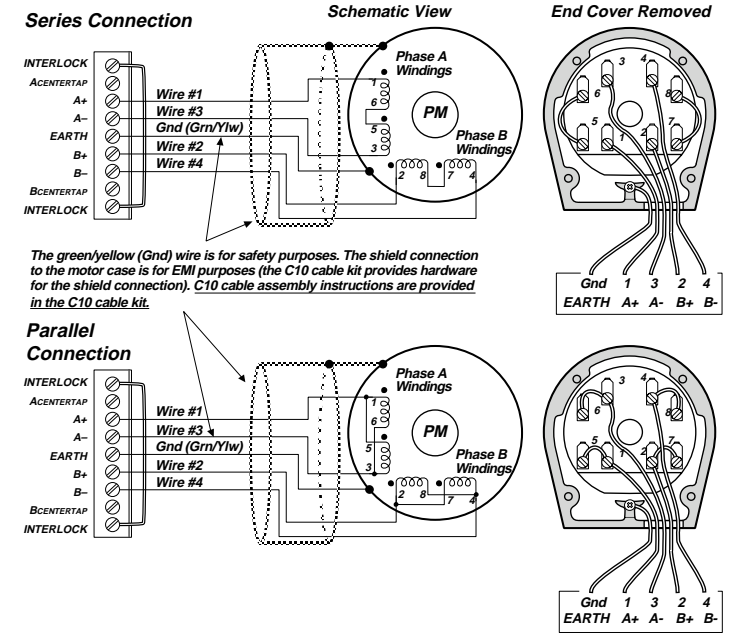

DO NOT LENGTHEN OR REMOVE INTERLOCK JUMPER